 


## RTCRT Probe O-ring Replacement

### ASSEMBLY INSTRUCTION:


1. Gather the pin/probe, cone and a new o-ring.




2. Align the cone with the end of the probe where the o-ring needs to be replaced.



3. Position the new o-ring onto the cone.

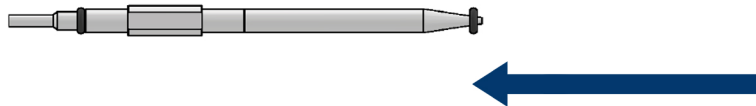

4. Gently push the o-ring from the cone to the midpoint of the pin/probe.

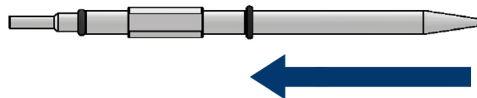

5. Once correctly positioned, detach and set aside the cone.



*\*If another o-ring replacement is necessary on the opposite side, flip and repeat these steps.*